



REGIESTUHL

Assembly instructions for director's chair Kelly

1.



2.



3.



4.



5.



6.



7.



8.



9.



10.



11.



12.





Safety and warning instructions

- Only use the director's chair as a seat, not as a ladder or climbing aid.
- Do not exceed the maximum load of 120 kg (50 kg for the Nanni).
- Avoid tipping, rocking, or placing heavy lateral loads on the chair to counteract the risk of tipping.
- Ensure that the chair is standing on a level and stable surface.
- Use suitable glides for the floor covering to prevent damage.
- When folding and unfolding, make sure that no fingers or other body parts get caught.
- Do not use a chair with visible damage.
- Do not leave children unattended on the chair.
- Make sure that you have unfolded the chair correctly and completely, as described in the instructions.